
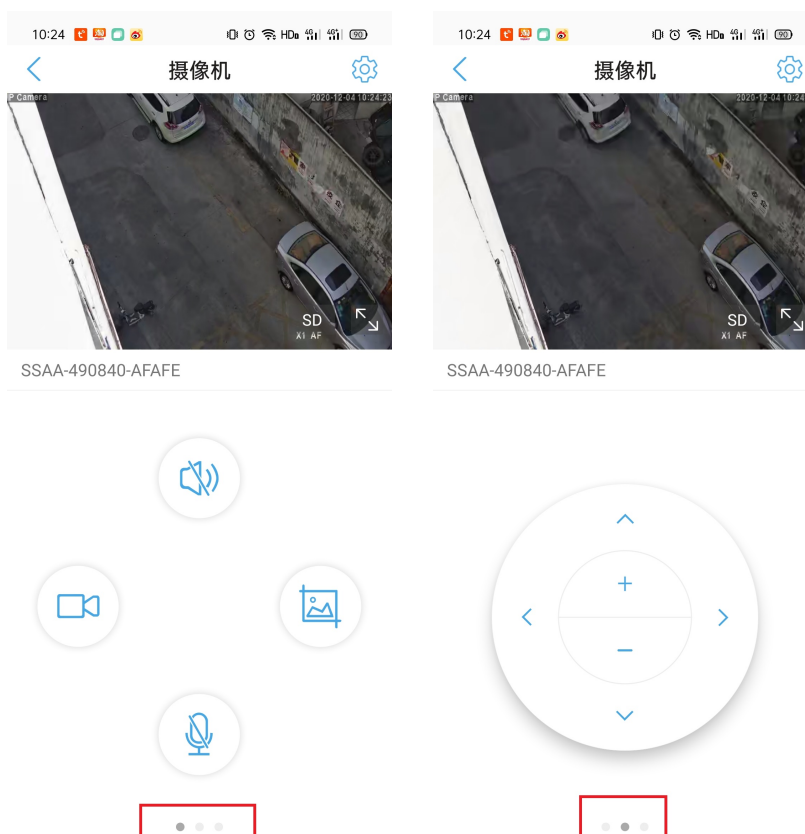


How to operate the PTZ IP camera

Pan Tilt Rotation Control



Press the arrow keys in direction controlling interface, camera will be rotated as the direction of button, if release the button, camera will stop rotating, additionally, rotation speed can be adjusted by speed parameters, as shown below.

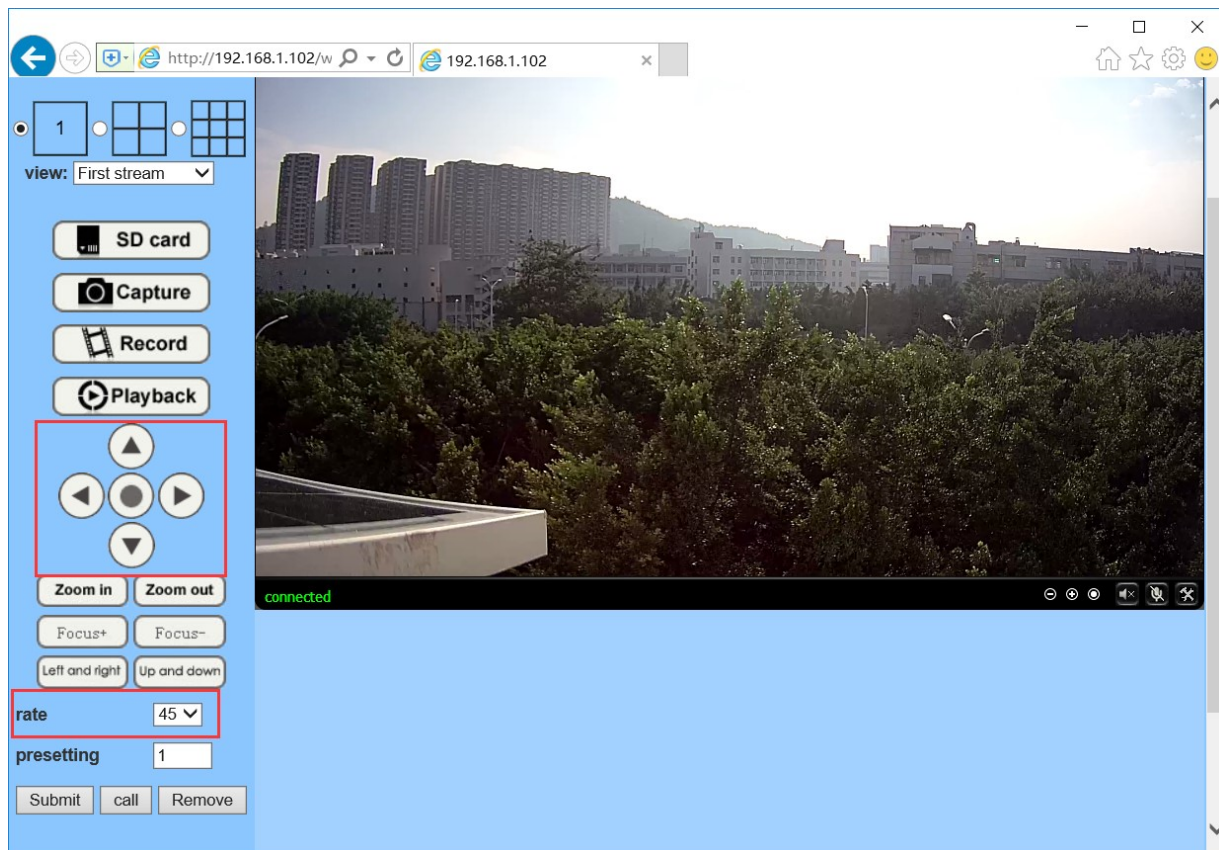

In app, control the camera rotation by sliding the phone screen.

Zoom Control

Click "Zoom in" button, image will be magnified, click "Zoom out" button image will be minified, click "Focus in" and "Focus out", the focus can be adjusted manually, as shown below.

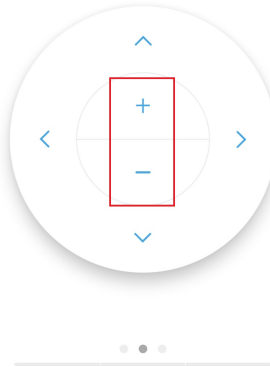
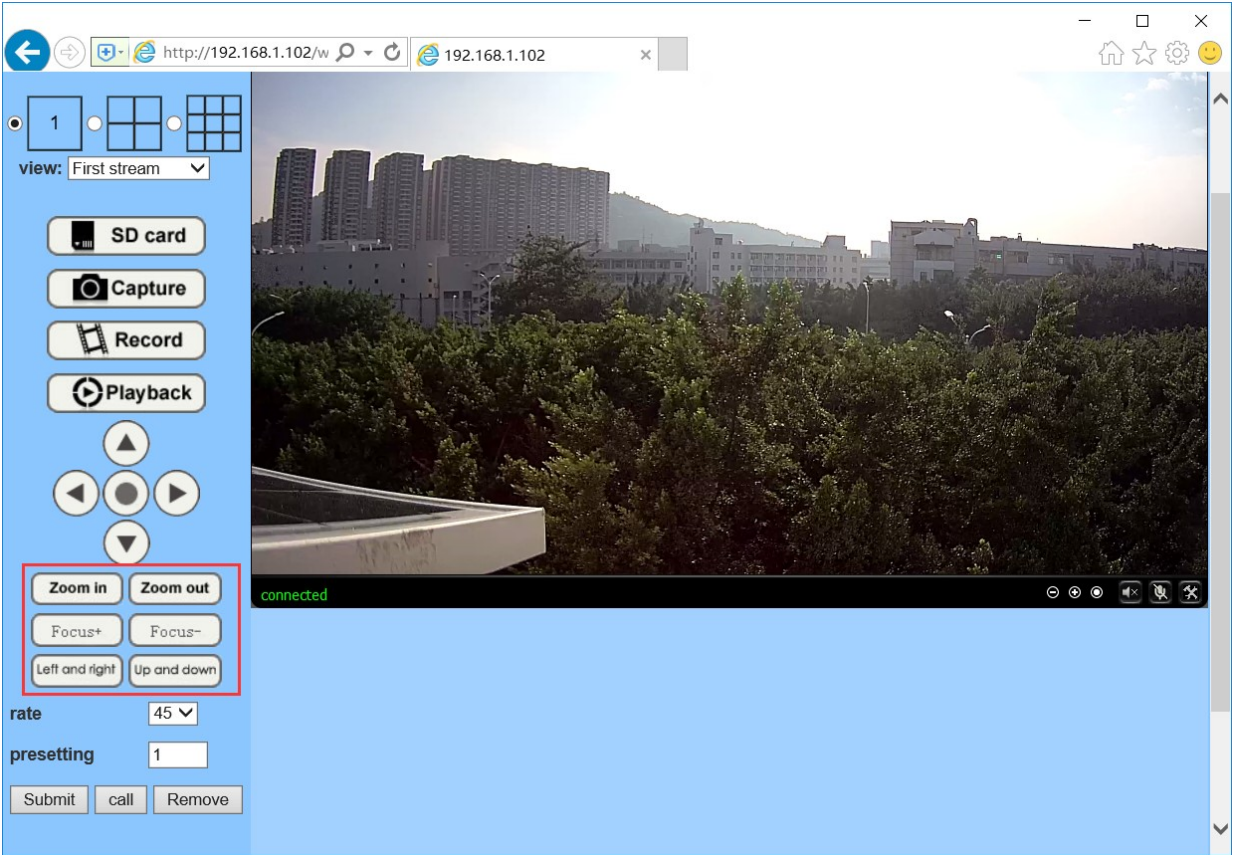


Preset Function

Preset settings: input preset point Number on presetting site, then click "Submit" button, this preset point will be set successfully, camera will record the current location.

Preset call: input preset point Number on presetting site, then click "call" button, this preset point will be called, camera will turn to recorded location.

Delete preset: input preset point Number on presetting site, then click "Remove" button, this preset point will be deleted.

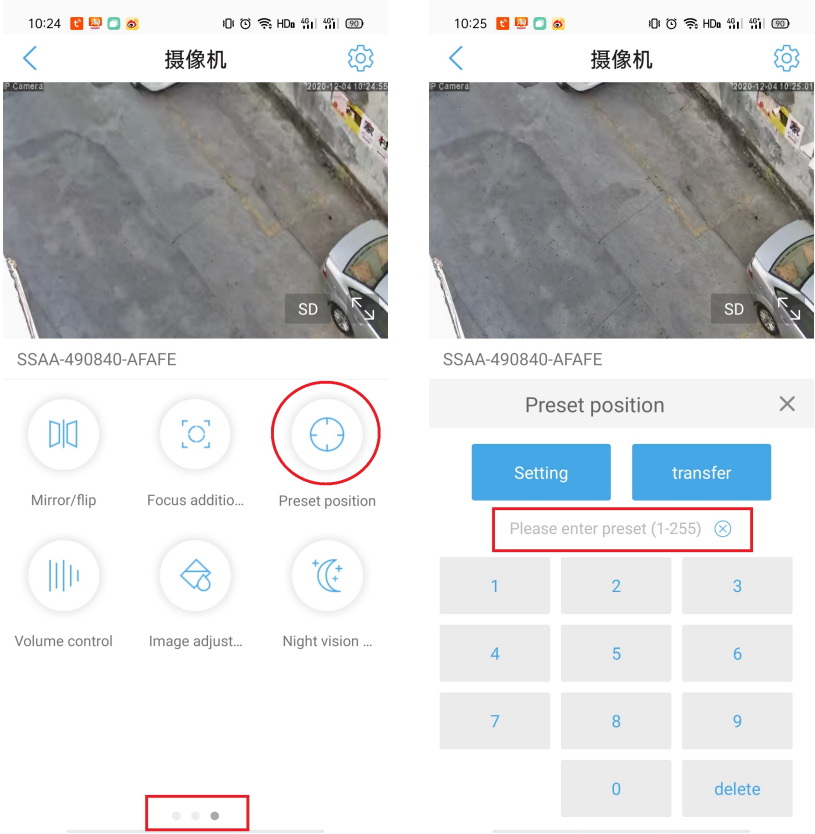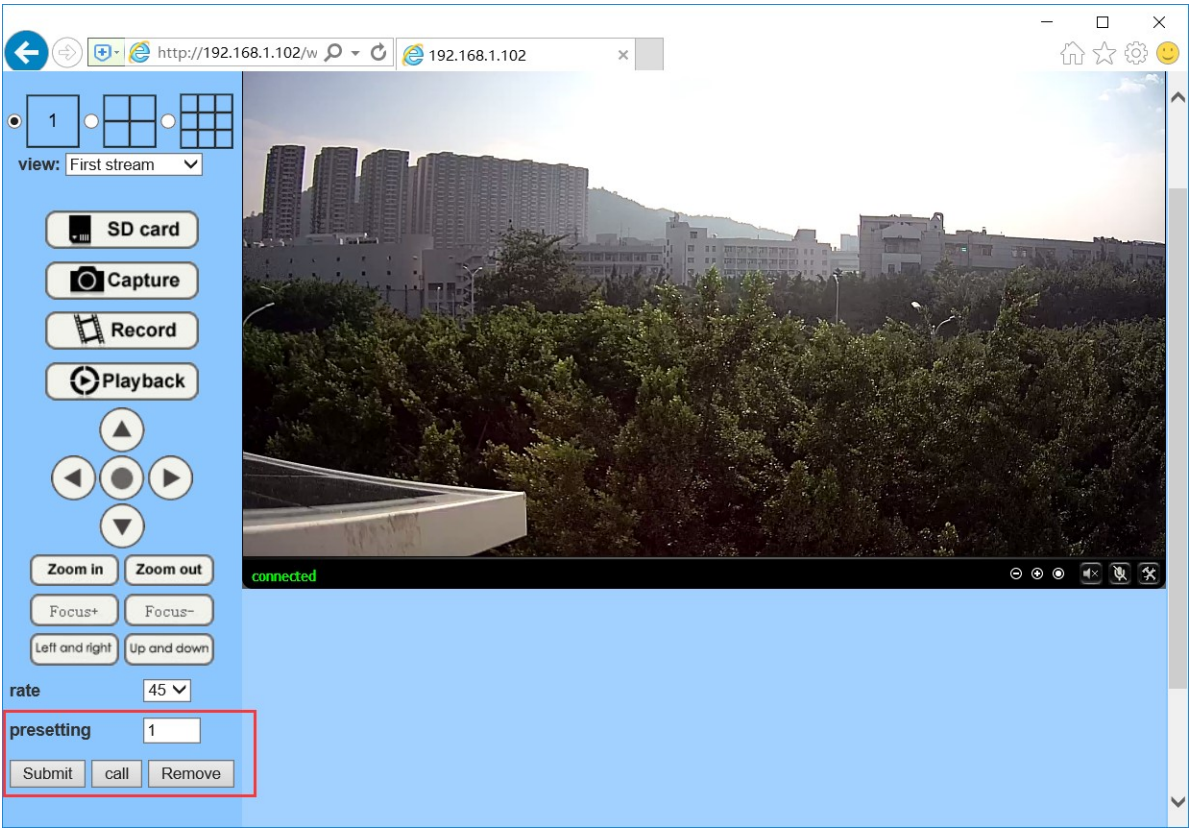

The following special presets are only used for the following 10x optical zoom PTZ dome cameras:



Set guard position

Set preset point 86: record the current position of the camera as the guard position. When the camera stops operating two minute, the camera will return to the guard position.

Call preset point 86: turn on the guard position function.

Call preset point 87: turn off the guard position function.

Rotation speed

Set preset point 211: low speed

Call preset point 212: medium speed (default)

Call preset point 213: fast speed

Humanoid tracking

Call preset point 66: turn on the humanoid tracking.

Call preset point 68: turn off the humanoid tracking.

When you call the “66” preset point to start humanoid tracking, the camera will record the current position as the guard point. When there is 15 seconds after the no pan-tilt operation or tracking ends, the camera will return to the current position.

When using humanoid tracking, you can choose lens zoom or lens not zoom.

Call preset point 69 :turn on the lens zoom.

Call preset point 70: turn off the lens zoom.

Infrared light board control

Call preset point 131: The infrared light board is always on and the image is black and white night vision.

Call preset point 132: The infrared light board is always off and the image is in color.

Call preset point 133: The default work module, infrared light board and image automatically switch according to the day or night environment.

Others

Call preset point 91: PT re-checks itself and returns to the initial position.

Call preset point 92: The PT to the initial position, the PT data is restored to the default value.

Setup preset point 210: Delete all preset point.

Call preset point 253: Lens component reset self check.